



# COURIER™ 5000

Shipping Scales



## *Low-Profile Scales Ideal for General Shipping and Animal Weighing Applications*

The Courier 5000 Series shipping scales feature a sturdy low-profile design with stainless steel top, making them tough enough for shipping applications, and easy to clean for small veterinary applications. Data is clearly legible on a large, bright 1.1 in/28 mm display, and UPS system communication protocol is included. Our proprietary Weight Alert™ mode will warn users if packages are too heavy, for example, to be sent by post or truck.

### *Unique Features:*





- Easy-to-use scales for general shipping use with painted steel base. Stainless steel pan holds up to daily use and is easy to keep sanitary. Adjustable display for mounting to adapt to your workspace.
- The Dynamic Weighing/Display Hold application is ideal for large boxes and packages as it retains weight data on the display - also ideal for animals in veterinary use.
- AC adapter power included. Simple USB type C for data and power connection – includes UPS software protocol string. Can also run using disposable battery power.

# COURIER™ 5000 Shipping Scales

## Specifications

Model	i-C52M6R	i-C52M15R	i-C52M30R	i-C52M50R	i-C52M50L	i-C52M100L	i-C52M200L	i-C52M200X
Capacity × Default Readability	6 kg x 0.002 kg 6,000 g x 2 g 12 lb x 0.005 lb 192 oz x 0.1 oz 12 lb x 0.1 oz	15 kg x 0.005 kg 15,000 g x 5 g 30 lb x 0.01 lb 480 oz x 0.2 oz 30 lb x 0.2 oz	30 kg x 0.01 kg 30,000 g x 10 g 60 lb x 0.02 lb 960 oz x 0.5 oz 60 lb x 0.5 oz	50 kg x 0.02 kg 50,000 g x 20 g 100 lb x 0.05 lb 1,600 oz x 1 oz 100 lb x 1 oz		100 kg x 0.05 kg 200 lb x 0.1 lb 3,200 oz x 2 oz 200 lb x 2 oz	200 kg x 0.1 kg 400 lb x 0.2 lb 6,400 oz x 5 oz 400 lb x 5 oz	
Maximum Displayed Resolution	1:3,000			1:2,500		1:2,000		
Weighing Units	kg, g, lb, oz, lb:oz (kg, lb, oz, lb:oz for models above 100 kg)							
Application Mode	Weighing, Dynamic Weighing/Display Hold, Totalization, Weight Alert™							
Display	1.1 in / 28 mm digit height, 5-digit, 7-segment LCD display with white backlight							
Keyboard	4 mechanical function keys							
Construction	ABS Plastic Indicator Housing Painted steel base with stainless steel platform (adjustable feet for L and X bases)							
Cable Length	6.6 ft / 2 m (full extension)							
Stabilization Time	1 second							
Power	Dry cell battery: 3 x AA (LR6) Batteries (not included) or AC Power Adapter: 100-240VAC ~ 0.5A 50/60Hz; Power output: 5.0 VDC 1.0 A or USB cable (USB connection to PC, cable length: 6.6 ft / 2 m) Battery life: 100 hours continuous use with backlight off							
Zero Range	2% or 100% of capacity							
Interface	Standard USB Type-C							
Operating Temperature Range	14 °F to 104 °F / -10 °C to 40 °C							
Safe Overload Capacity	150% of capacity							
Platform Dimensions (L x W x H)	13.0 x 12.6 x 1.7 in / 329 x 319 x 43.5 mm				20.5 x 15.7 x 2.1 in / 520 x 400 x 52.9 mm			35.4 x 23.6 x 2.0 in / 900 x 600 x 50.9 mm
Net Weight	9 lb / 4.1 kg				18.7 lb / 8.5 kg			38.4 lb / 17.4 kg
Shipping Weight	10.6 lb / 4.8 kg				21 lb / 9.5 kg			42.3 lb / 19.2 kg
Shipping Dimensions	15.6 x 15.2 x 6.1 in / 395 x 385 x 155 mm				23.6 x 19.1 x 3.9 in / 600 x 485 x 100 mm			38.8 x 26.8 x 4.1 in / 985 x 680 x 105 mm

## Outline Dimensions

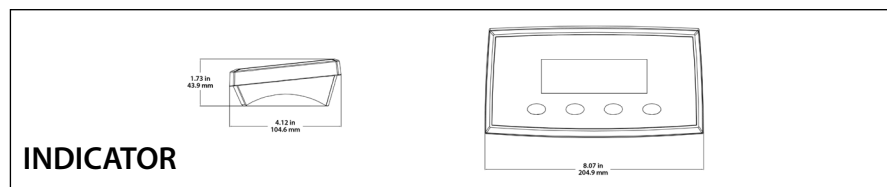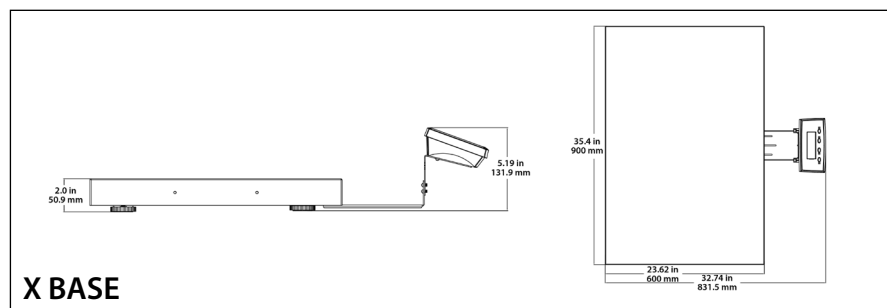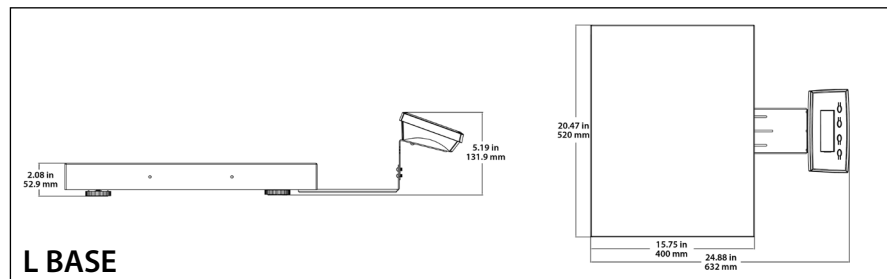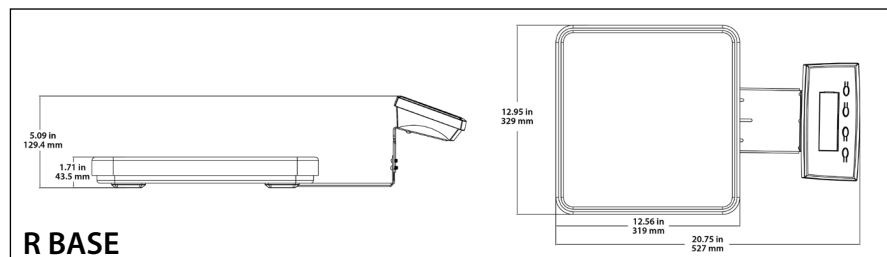

## Compliance

- **Product Safety:** IEC/EN 61010-1; UL certified power supply
- **Electromagnetic Compatibility:** FCC Part 15 Class A; Canada ICES-003 Class A; IEC/EN 61326-1 Class B, basic environments
- **Compliance Marks:** CE
- **Other:** WEEE, RoHS

## Accessories

Remote Column Kit 38.6 in / 980 mm Painted Steel ..... 30795819

Remote Column Kit 13 in / 330 mm Painted Steel ..... 30800931

Coiled Extension Cable 9m i-C52 i-C31 ..... 30809920

Rubber Mat Kit Antiskid for X base ..... 30548975

80776844\_B 20240701 © Copyright OHAUS Corporation

**OHAUS CORPORATION**

Tel: 800.672.7722

973.377.9000

Fax: 973.944.7177

[www.ohaus.com](http://www.ohaus.com)

The management system governing the manufacture of this product is ISO 9001:2015 certified.

